 


BW20K

20KW

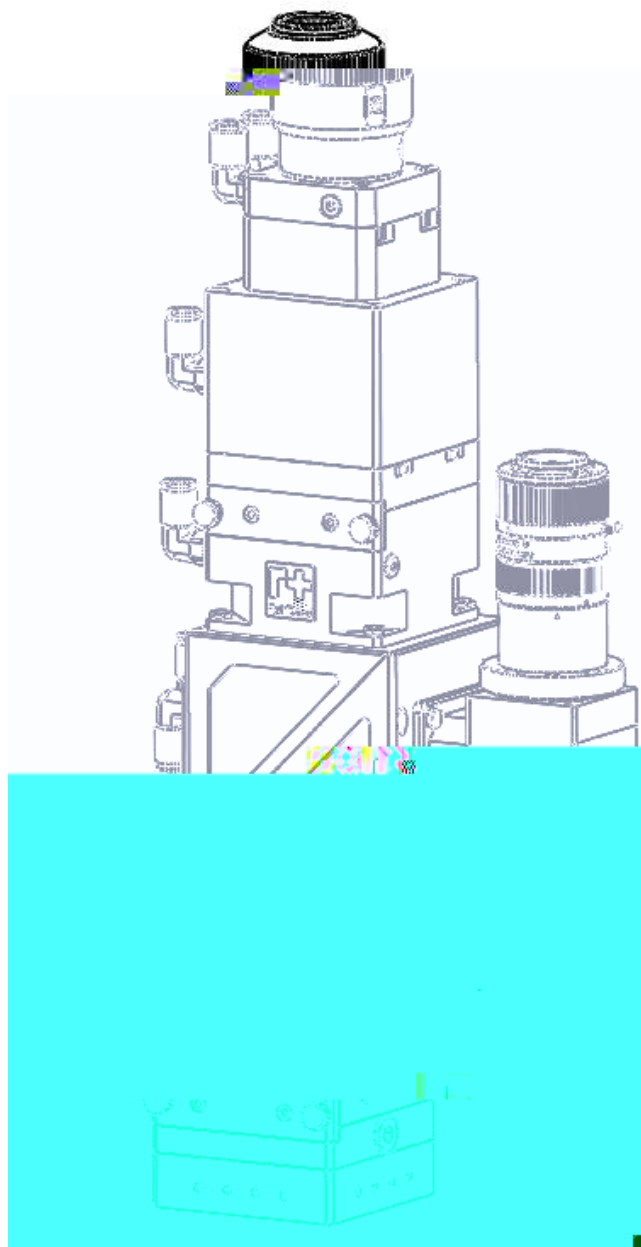

Empower 嘉强

Hotline: 400-670-1510

Email: sales@empower.cn

Add: 上海市 松江区 东宝路 8 号



01	2025.08.04	V1.0

BW20K

RAYTOOLS

BW20K

•

•

•

•

•

•

1.

1.1

1.2

1.3

1.4

1.5

1.6

1.7

1.8

2.

2.1

2.2

2.3

2.4

2.5

2.6

2.7

2.8

3.

3.1

3.2

 
4.

4.1


4.2

1.

1.1

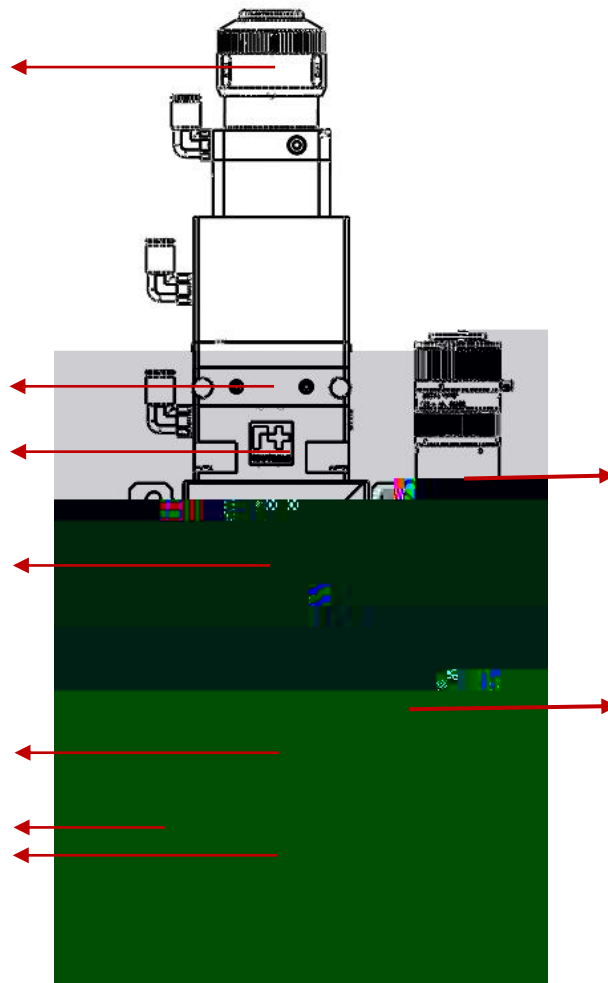[illegible]

 1.2

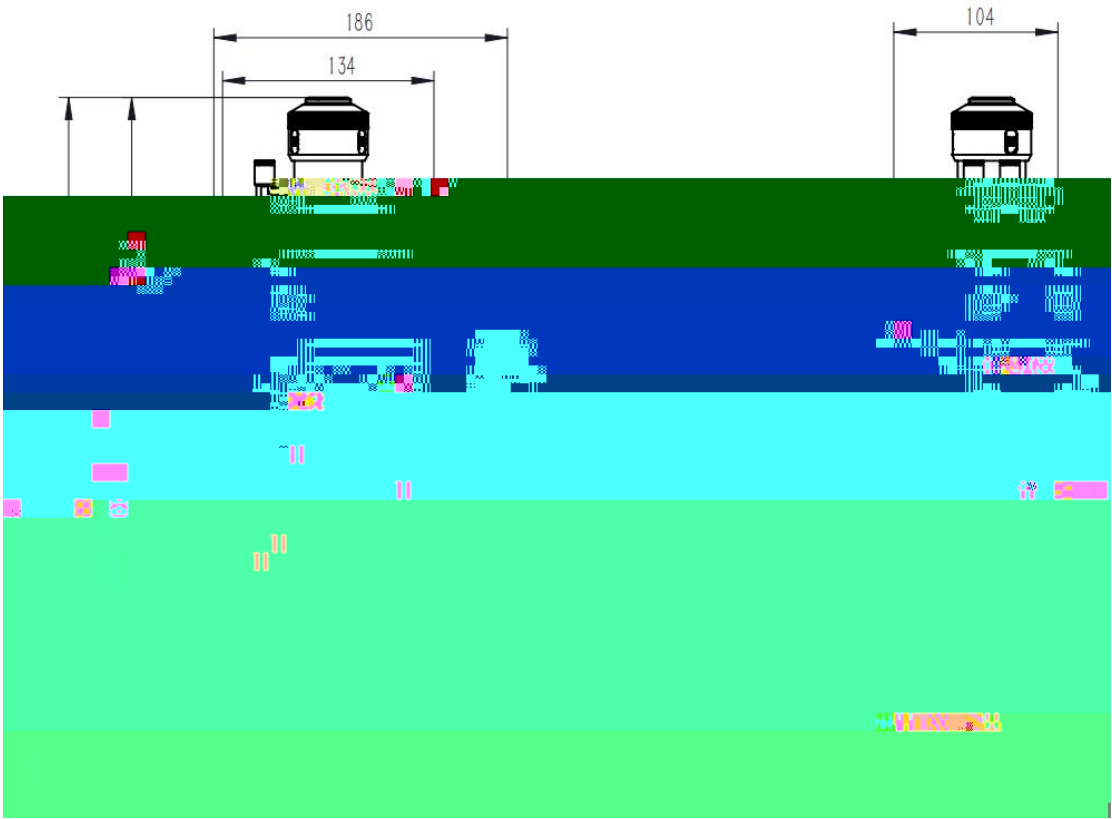


F150/ 0 °
:

1.3

BW20K

1064nm

 1.4

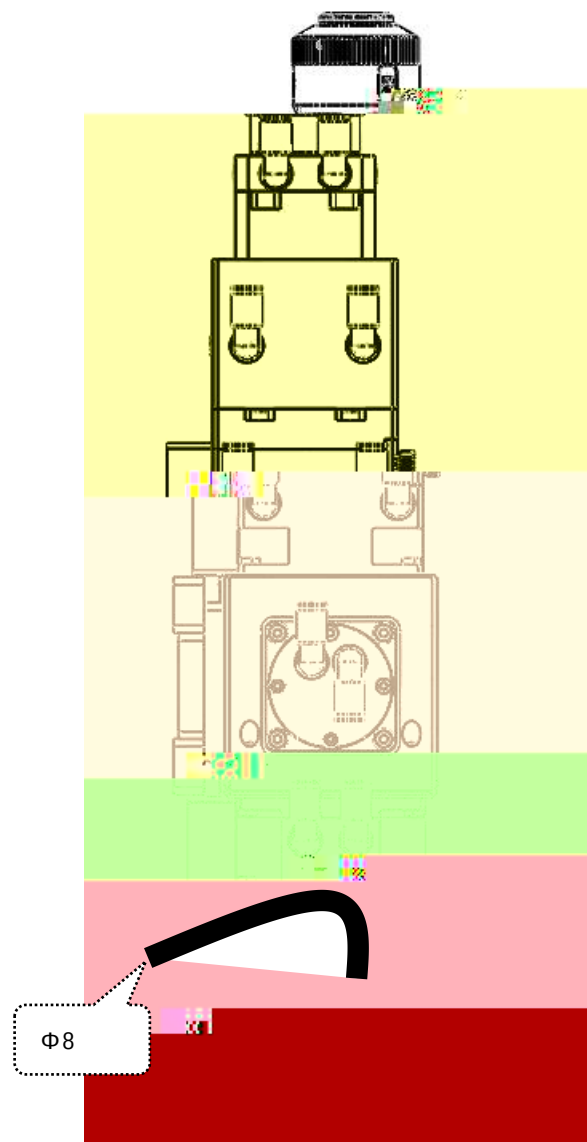


BW20K


0.4-0.6MPa

8-25L/min

 1.5


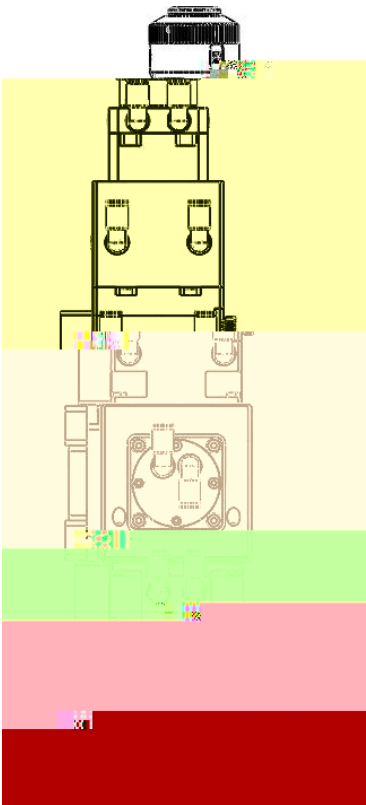


BW20K

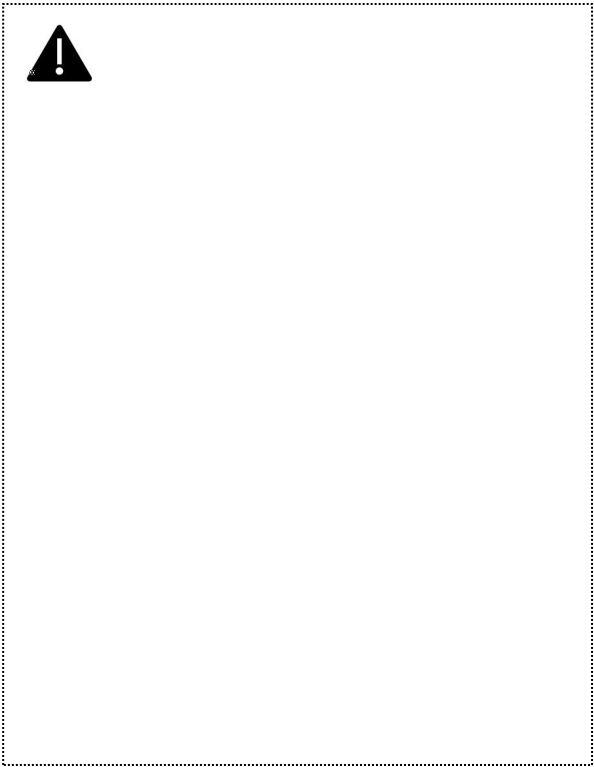 


1				
2		24-26 28-30	20-22 24-26	
3		20		
4		2-6		bar
5		2-4		L/min

  1.6

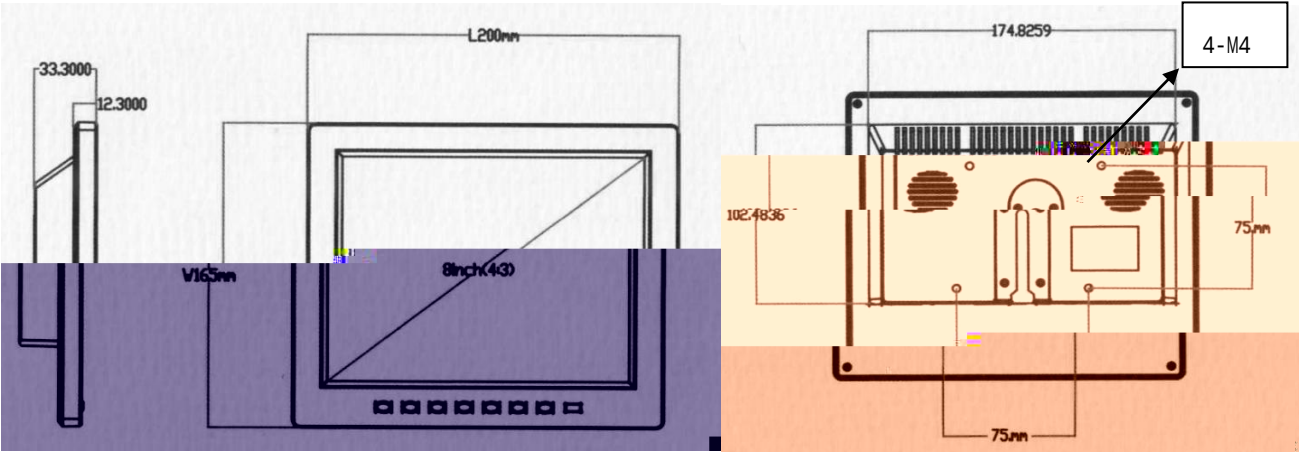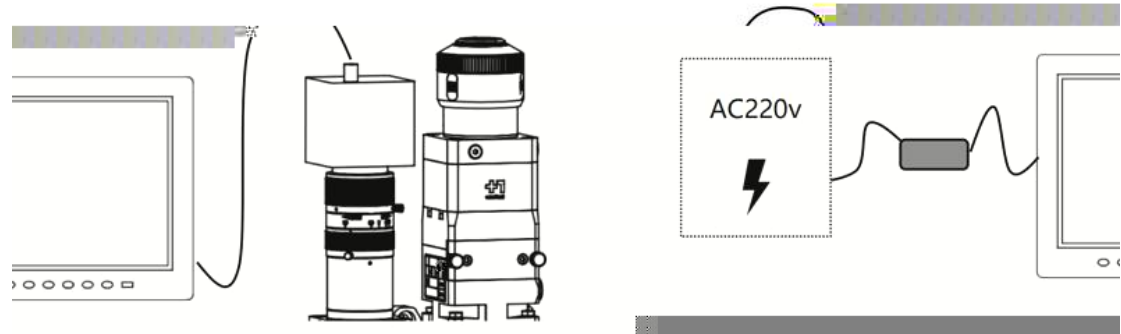

1.7

 8

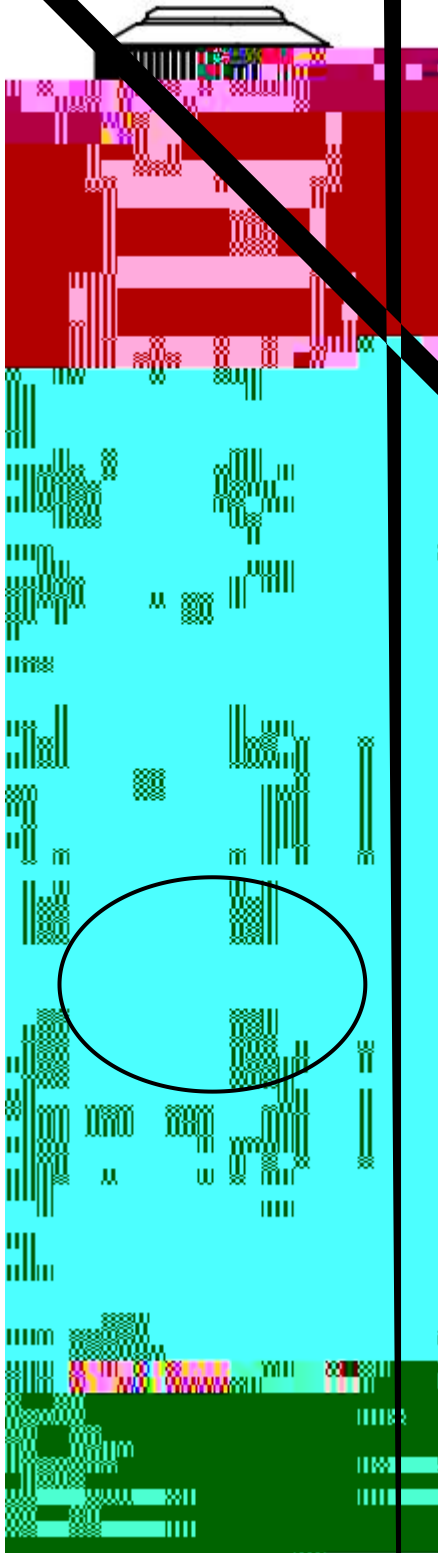

2.

2.1

10cm

30

 
洁净工作台类型：垂直净化；洁

净等级：ISO 5级、100级


气流速度：0.3m/s




2.2

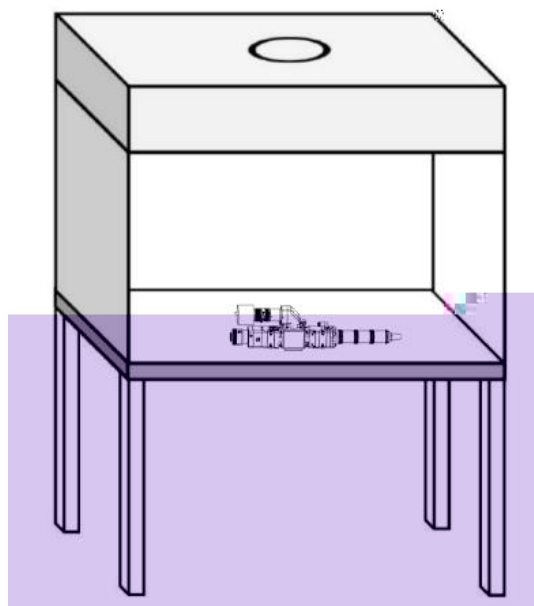

 2.3

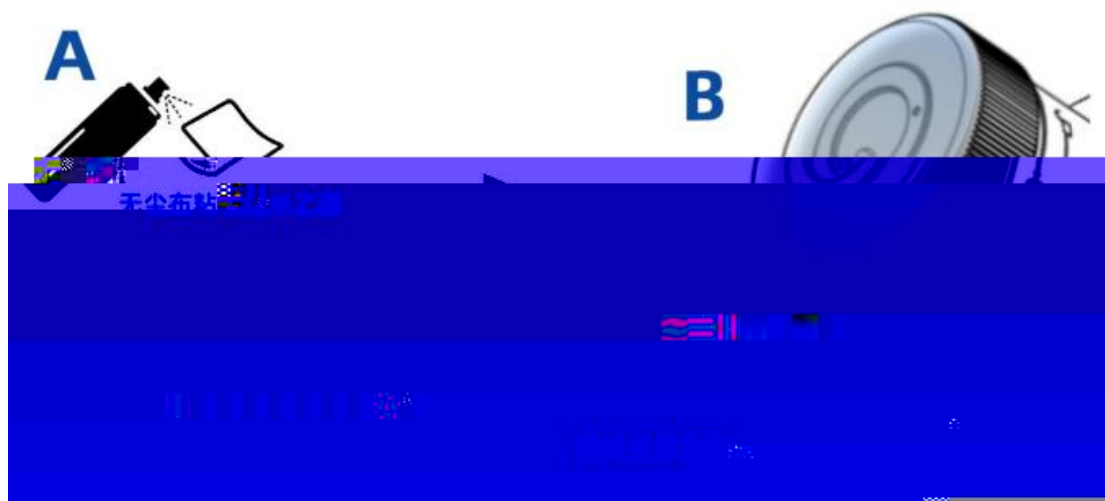

 2.4

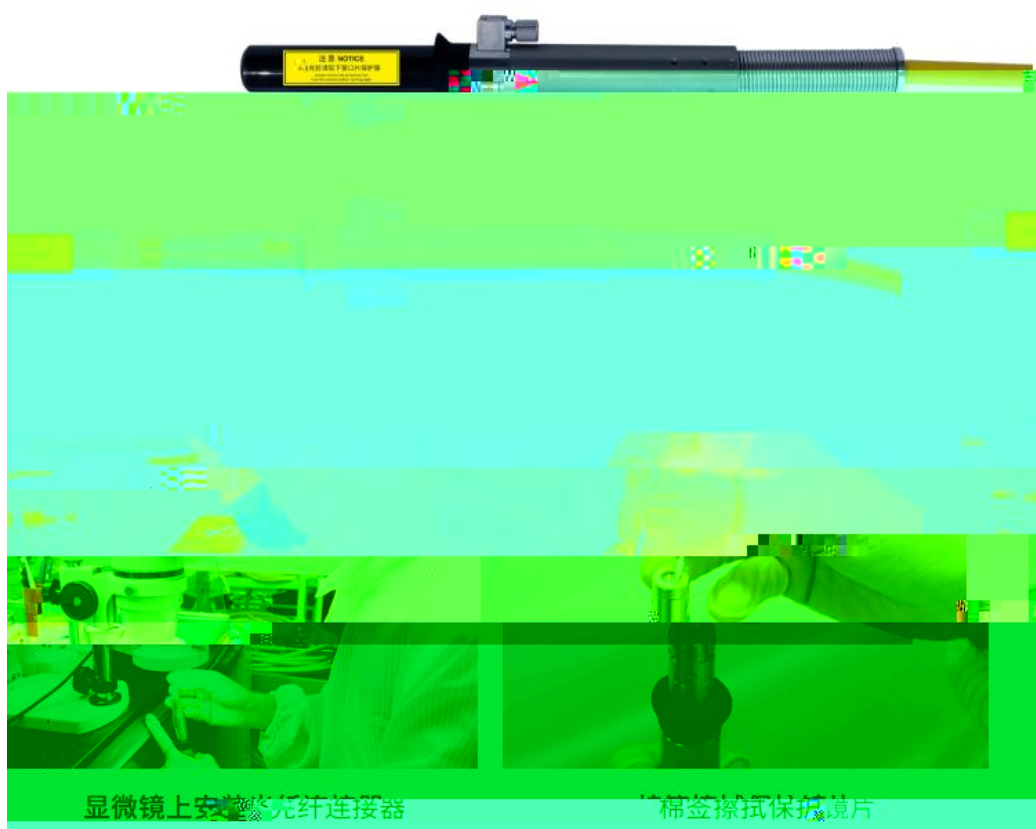

2.5

•



•

QBH

45 °

45 °

•

 
•

QBH


2.7

M6x20

/

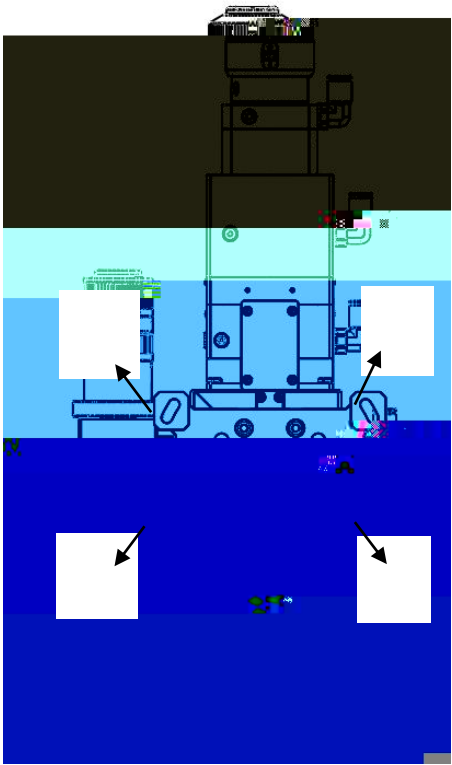

BW20K

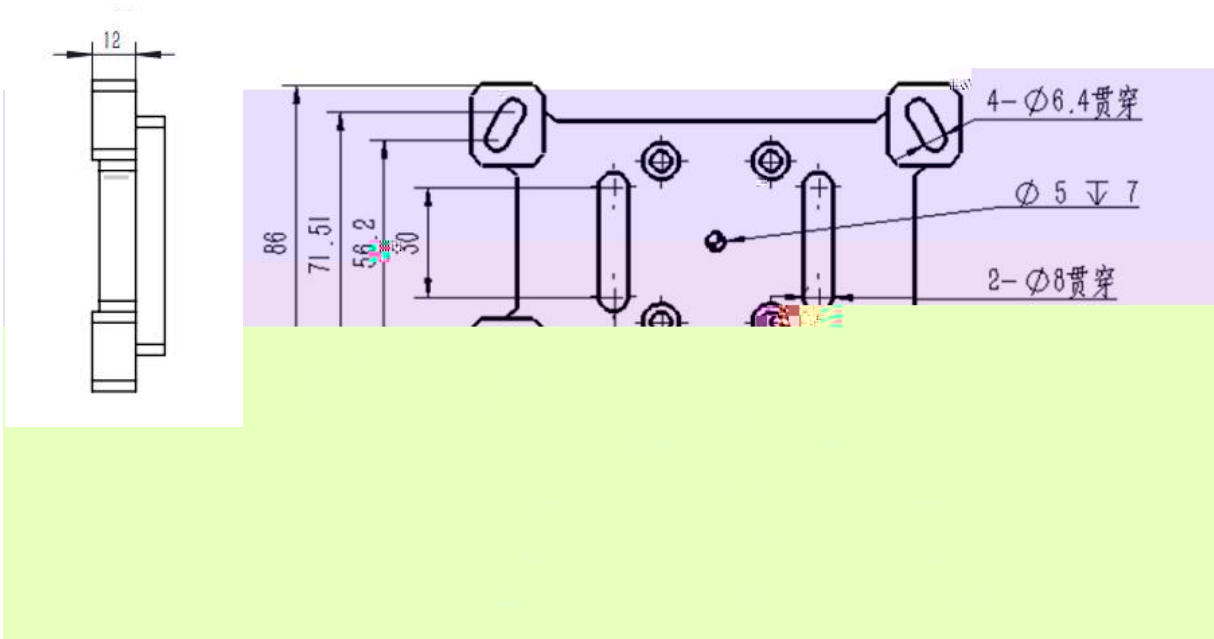 

3.

3.1



1.

2.

3.

4.

5.

6.

7.

8.



3.2



 
- 1.
- 2.
- 3.
- 4.
- 5.
- 6.
- 7.
- 8.



4.

4.1



1

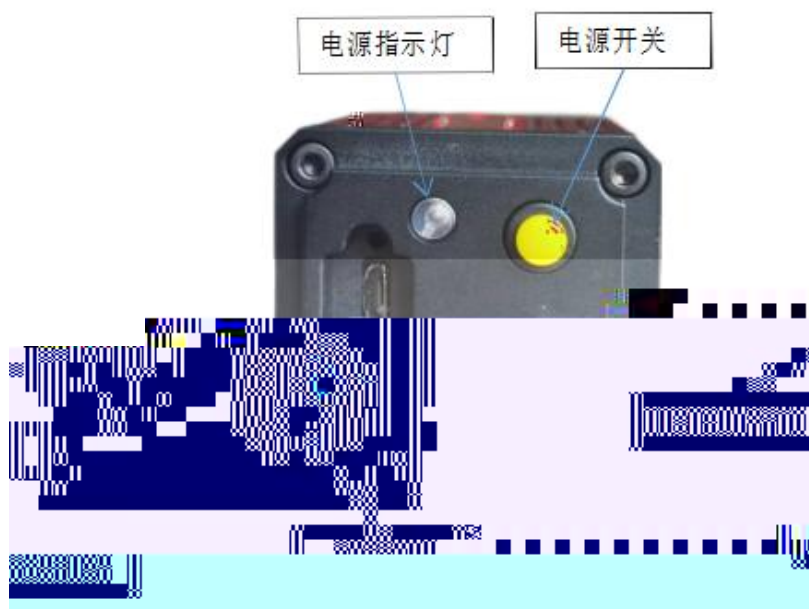


2

   
A sdk MecaVision Camera Platform Setup(2.1.10.173). exe,



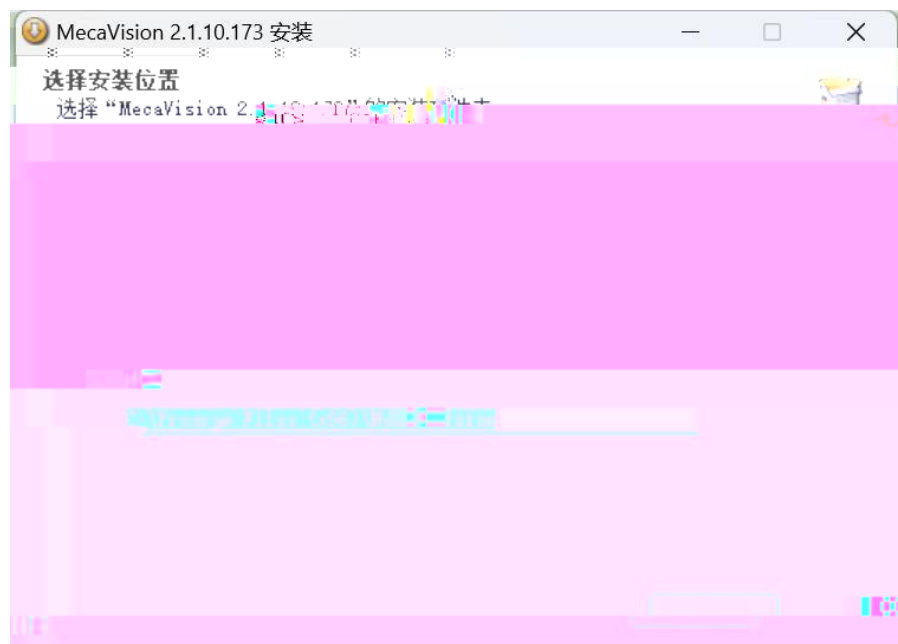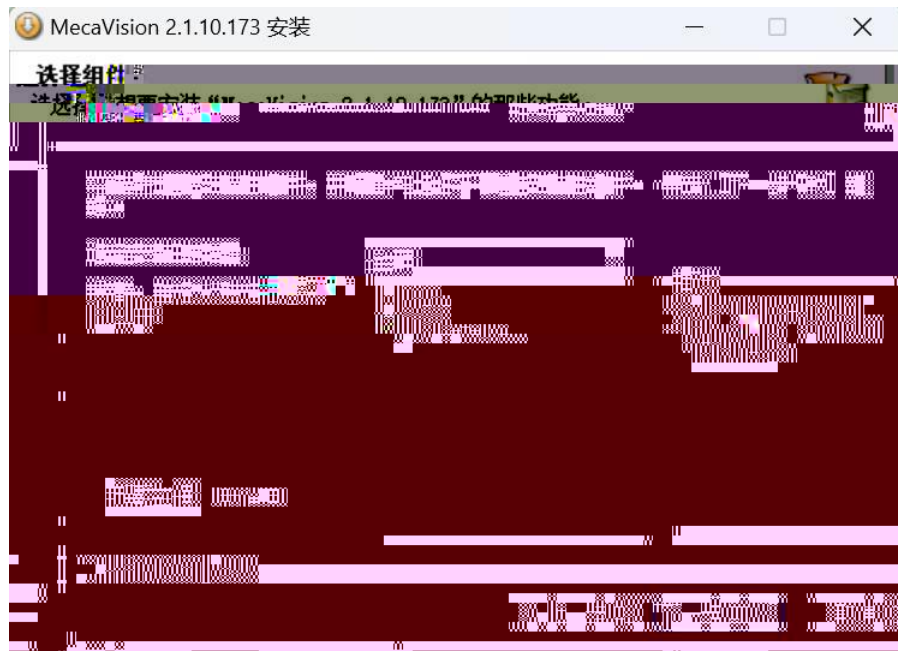

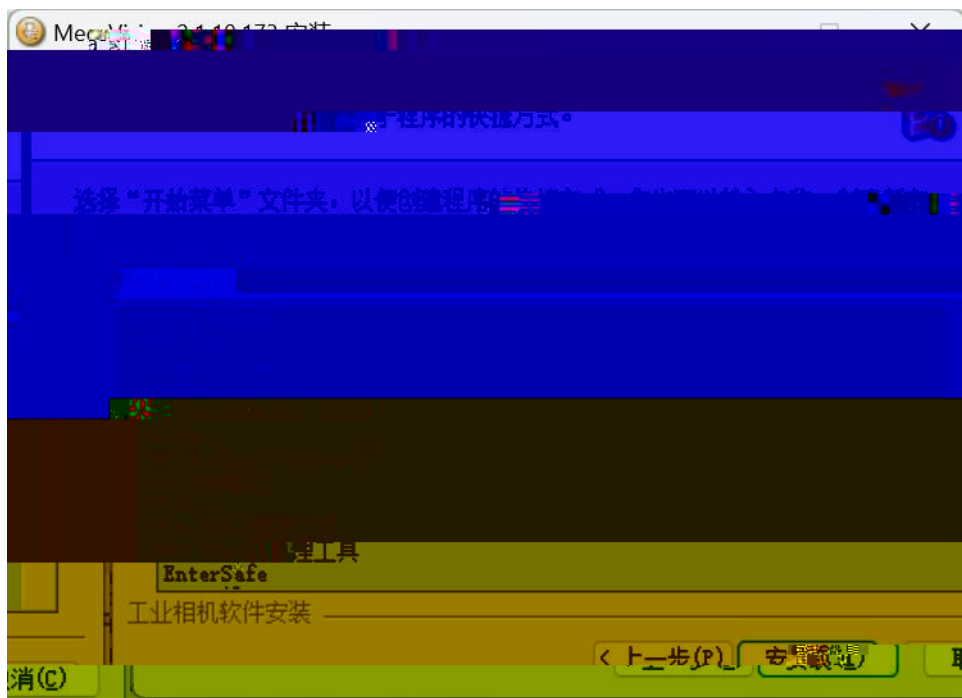

“ ”

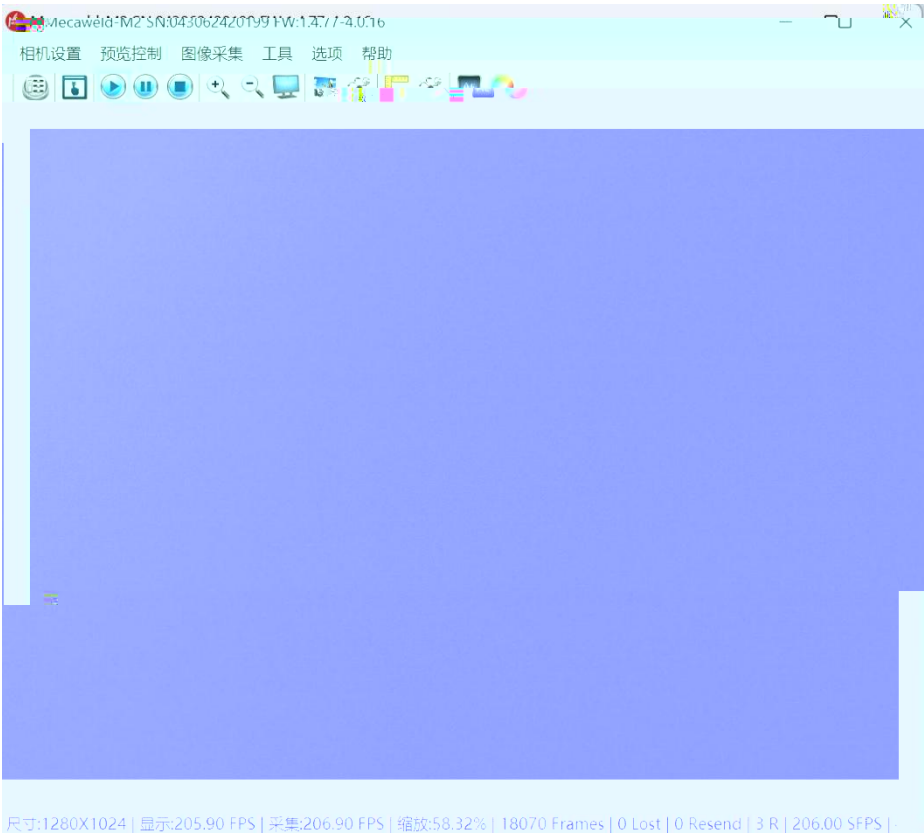 

A 1/4 11
Logo

B USB USB3.0
USB3.0

C 12VDC

D



1/4 POOP

在出厂前，请按照相机的默认参数相机即可正常工作



M37

 
如果不小心调乱了参数导致相机不能正常工作，
认设定参数！

“ ” “ 10 ”



“ Mecaweld ” logo

“ ” 180 °

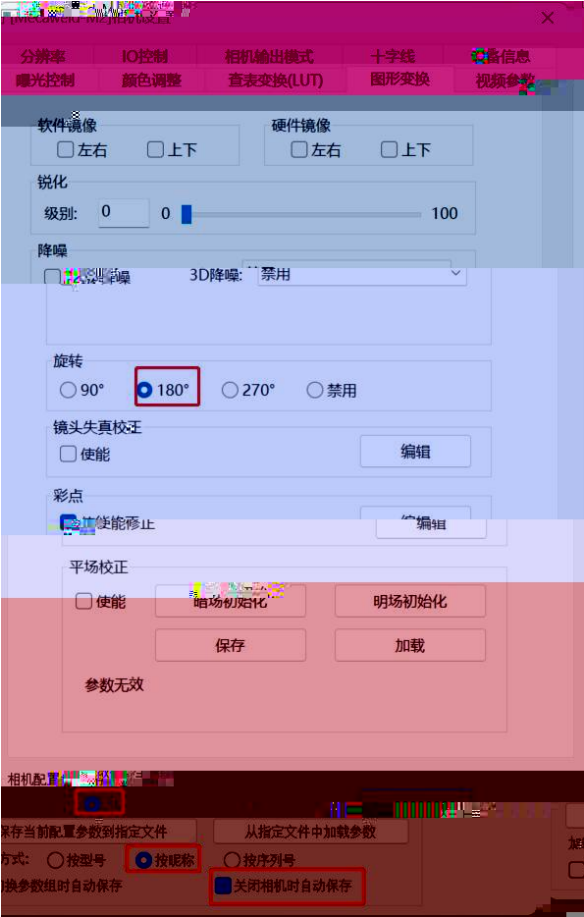






A, “ ” “

“ ”



   在上述画面必须严格按照图中所示正确设置数码相机将不能

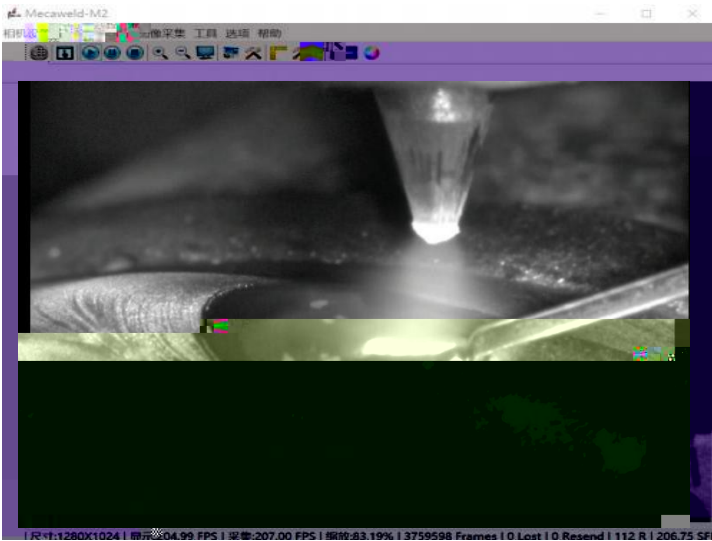

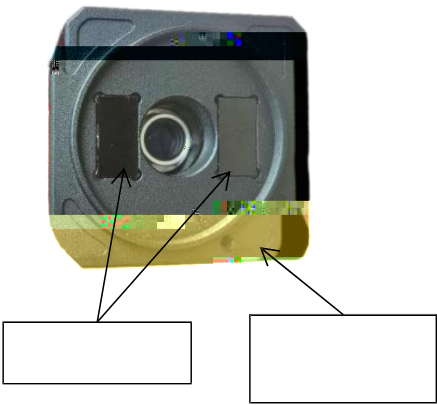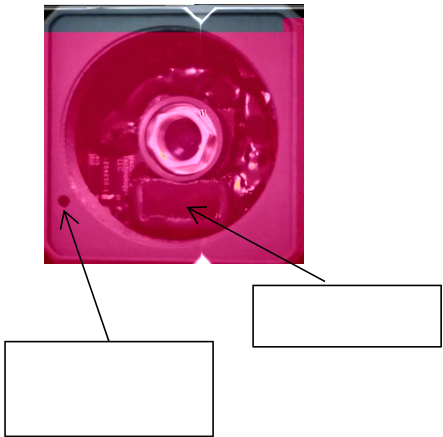

USB


12VDC

DC12V

USB

USB

 4.2

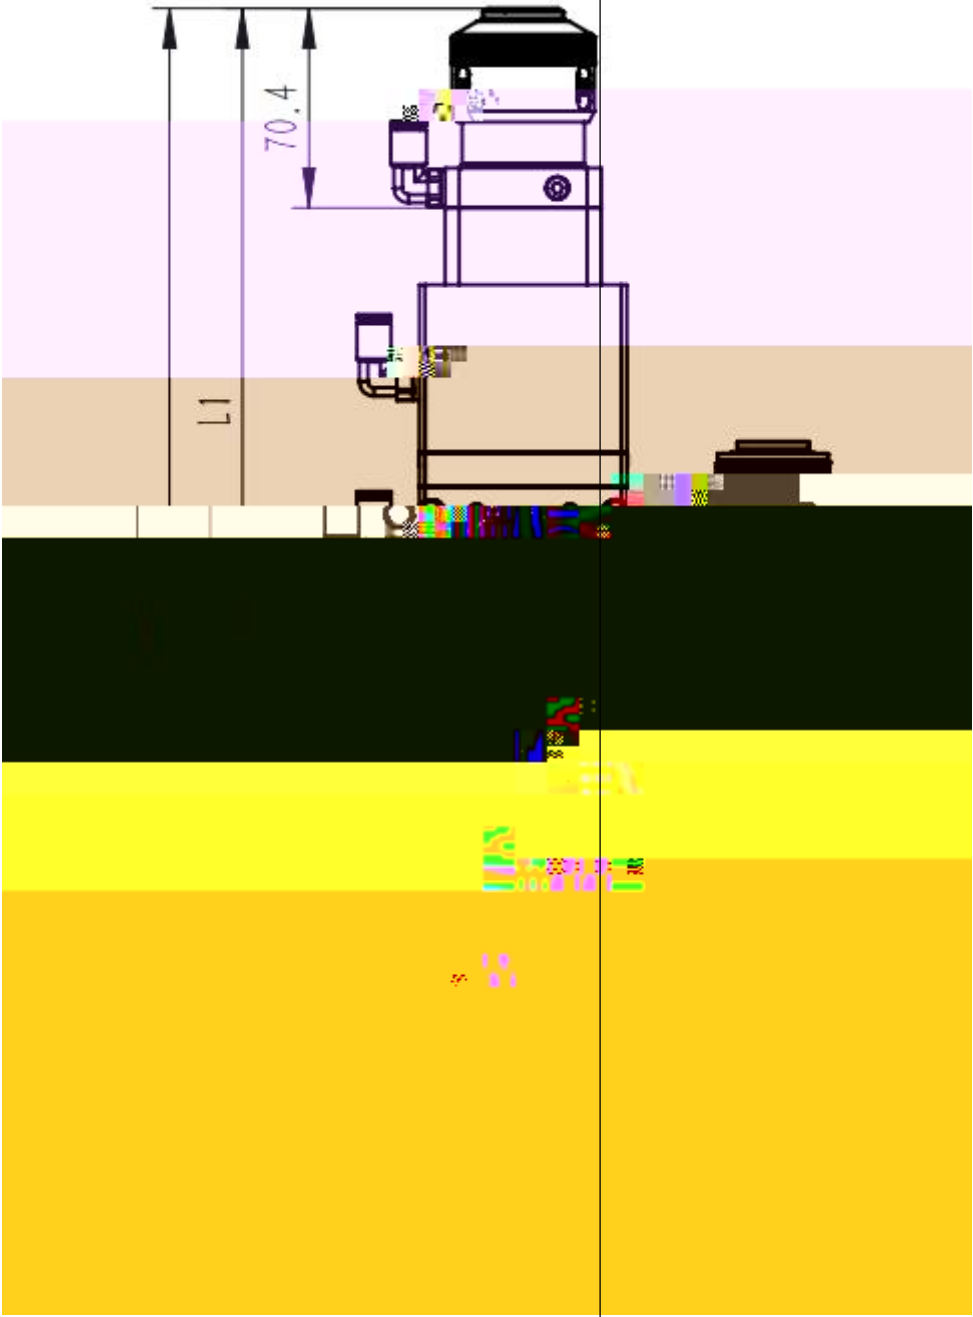

QBH , 0 °

	L1(mm)	L2(mm)
F100	172.9	383.9
F150	222.2	433.2



嘉强 (上海) 智能科技有限公司

地址: 上海市松江区车墩镇 8 号

咨询热线: 400-670-1510

邮箱: sales@empower.cn

网址: www.empower.cn